



## Handrasenmäher

Hand Lawnmower

Tondeuse à main

Handmaaier

Ruční travní sekačky

Ręczna kosiarka do trawników

Handgräsklippare


Rasaprato a mano

Cortacésped manual

Corta-relva manual

Luxus 33/38

Comfort 30

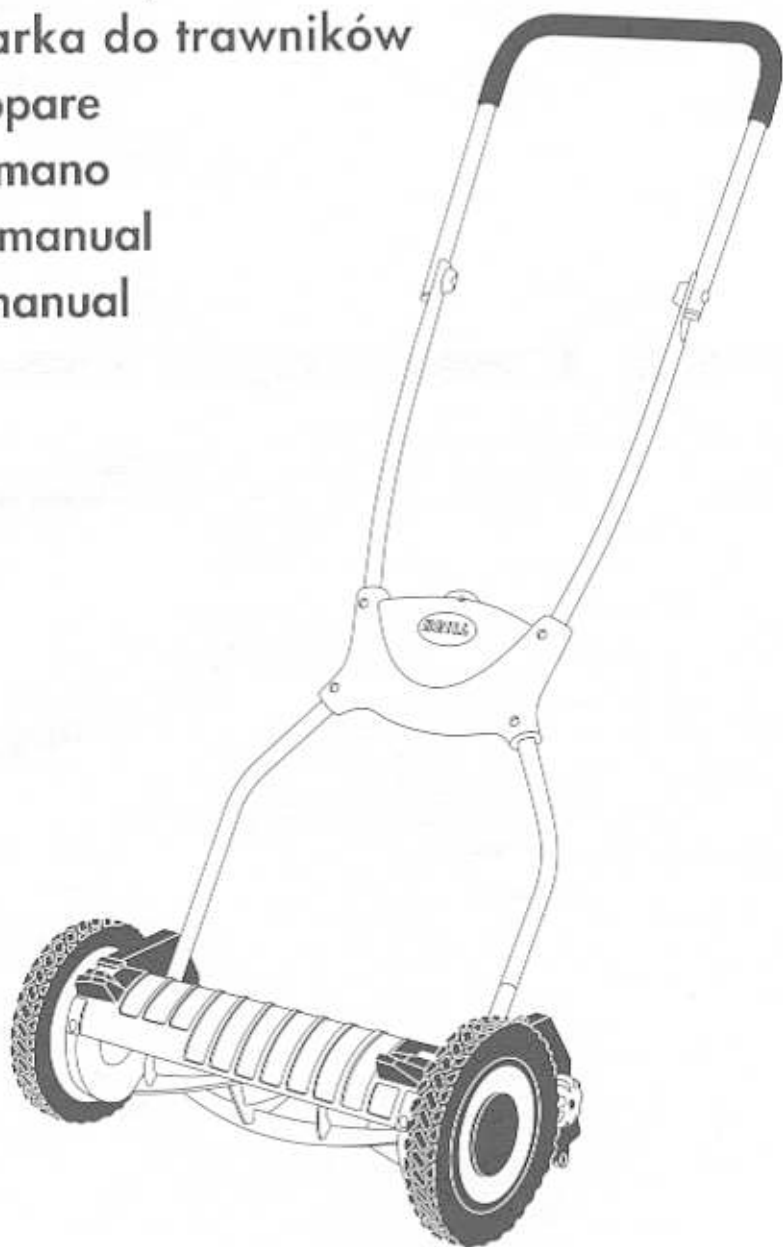

GB

Your new hand lawnmower is a quality product that provides an optimum of operating comfort and functionality.

If you use this lawnmower properly and look after it, it will provide many years of service.

As a hand lawnmower, it is suitable for use in private gardens and allotments. Hand lawnmowers for private gardens and allotments are lawnmowers used mainly to cut lawns and grass, but not in public parks, sports grounds, agriculture or forestry.

Compliance with the user's manual provided by the manufacturer is a precondition for the correct use of this hand lawnmower.

The user's manual also contains operating, maintenance and repair rules.



### Attention!

**Do not use the lawnmower to cut creepers and climbing plants, or lawns on roofs or in boxes on balconies. Danger of injury!**

Read the user's manual carefully.

Follow the instructions in the manual. Use the manual to make yourself familiar with the operating parts and with the correct use of your lawnmower.

For safety reasons, children and young persons under 16, and persons unfamiliar with the user's manual, must not use this lawnmower.

## 1. Assembly

### 1.1. Checking all parts are included

The Hand Lawnmower box contains the following parts:

- Hand Lawnmower
- Node
- 1 upper section of the guide handle
- 1 middle section of the guide handle
- 1 lower section of the guide handle
- Assembly parts for the guide handle in a plastic bag
- 1 thickness gauge
- User's manual

### 1.2. Assembling the guide handle (Fig. A - K)

1. Tilt your Hand Lawnmower so that the black rollers face upwards (Fig. B).  
Fit the lower section of the guide handle (1) so that the drilled holes (6) are over handle bolts (7) (Fig. A/E).  
**Note:** Make sure that the groove in the drilled hole (6) and the locking tab of the handle bolt (7) meet (Fig. C).  
**Warning!** Do not use excessive force. First ensure that the recess in the handle and the lug of the

bolt are in alignment and then fix together.

2. Continue assembling the guide handle as follows using the black central connecting section: Disassemble the central connecting section (4) (referred to as the 'node' from now on). The front and rear sides of the node are fastened together by a clip lock to prevent them from springing open. The clip lock can be found in the recess on the back of the node. For easier disassembly, release the clip lock by pushing it outwards. Press the four nuts into the recesses in the rear section of the node (the side without the Brill logo). Gently press in the four nuts so that they are inserted properly and do not fall out of the recesses when the node is turned over (Fig. D).  
Turn the mower so that the rollers rest on the ground. Prepare the top and middle sections of the guide handle so that the sections of the handle overlap as shown in the assembly diagram (Fig. E). Hold the rear section of the node so that the grass catcher holder (8) faces upwards. Now insert

both sections of the handle according to the recesses (Fig. F). Attach the front section of the node to the rear section of the node. Make sure that you hear the clip lock snap into place and screw together both parts of the node using the bolts provided (5a) (Fig. G-I).

3. Now attach the middle and top sections of the guide handle using the bolts and wing nuts provided (5b) (Fig. J/K).

## 2. Setting the cutting height (Fig. L/M)

Place the mower on a firm level surface. Stand behind the mower so that you can place one foot on the rollers (9) (Fig. L). Loosen the two setting screws (10). You can now use both hands to set the cutting height with the setting handles (11) (Fig. M).

Model	Longest cut	Shortest cut
Luxus 33	45 mm	14 mm
Luxus 38	45 mm	14 mm
Comfort 30	40 mm	18 mm

Make sure that the cutting height marking arrows (12) show the same height on the scale on both sides.

Now tighten the setting screws (10).

The mower must be set so that the bottom blade does not come into contact with the ground where there is any unevenness.



### Attention!

Never use the mower near people, especially children, or animals. The user is responsible for all injuries.

Before using the mower, always check the nuts, bolts and working tools for wear or damage. Replace worn or damaged blades in sets.

Always make sure you have a clear view when using the mower.

When mowing, wear proper shoes with non-slip gripping soles and long trousers.

Before using the mower, check the area you want to cut and remove any stones, pieces of wood, wire and similar objects. The blades can catapult objects like this at great speed.

If the blades or the mower hit any solid object or obstruction, have the mower examined by an expert.

## 3. How to cut properly

The hand mowers can cut grass up to the following lengths:

Model	Length in mm
Classic 30	100
Classic 35	100
Luxus 33	140

If you want a well-looked after lawn, the grass must always be kept shorter.

At the beginning of the cutting period, and with new lawns, select a relatively high cutting height and gradually reduce this each time you mow the lawn. If you want to have a well-manicured lawn, set the cutting height to approx. 2 cm.

Cut the grass every week if possible. Frequent cutting forces the growth into the cut stalk and makes it resistant.

If possible, always cut the grass when it is relatively dry. To obtain a clear pattern, push the mower in straight lines at an even walking pace. The cutting paths should overlap by a few centimetres to avoid leaving strips of grass.



### Attention!

Be careful! The rotating blade roller can cause injuries!

Always keep the safety distance between the user and blade roller shown by the push bar.

Take extra care when mowing on embankments and slopes: make sure you are on firm ground and always wear shoes with non-slip gripping soles and long trousers. Always mow across a slope.

Take special care when moving backwards and when pulling the mower. Danger of stumbling!

Never place your hands or feet on or underneath moving parts.

#### 4. Resetting the blades (Fig. N)

**GB** Before leaving our factory, the blades of your new hand mower were set optimally. If the cut becomes uneven after long use, correct the bottom blade setting.

Slide the enclosed gauge (13) on the left-hand side between a cutter of the cutter roller and the bottom blade.

Use a 10 mm open-end spanner to turn the hexagonal screw (14) to the right until the gauge just touches. Repeat this procedure on the right-hand side of the mower.

Now rotate the cutter roller to test this setting: it should not come into contact with any of the cutters on the bottom blade.



**Attention:**

Take extra care when working on the cutters (danger of injury).

#### 5. Test cut using newspaper (Fig. O)

After you have reset the cutters, make a test cut using newspaper.

#### 6. Cleaning, storage and maintenance (Fig. P)

After use, clean the mower and oil lightly. Grease the cutters. The symbols in Figure P indicate which parts of the hand lawn mower can be lightly oiled (SAE 30) or greased.

Store the mower in a dry place.

The models with contact-free cutting technology (Comfort and Luxus) cannot be sharpened because of the special cutting geometry. If necessary the bottom blade and the blade roller must be replaced

with a new complete set. Please ask your specialist dealer who will be happy to assist you.

The hand lawnmower must only be repaired and the blade must only be replaced at qualified workshops.

Where possible, have your mower inspected in autumn, so that it is ready for immediate use in the following spring.



**Attention!**

For safety reasons use only manufacturer's original parts or parts released by the manufacturer.

We would like to point out expressly that we are not liable under the Product Liability Act for damage or injuries caused by our appliances if these were caused by incorrect repairs or if replacement parts were used which were neither manufacturer's original parts or parts released by the manufacturer and the repair was not carried out by an authorised after-sales service provider or an authorised dealer. This applies analogously for extension parts and accessories.

#### 7. Mowing with the grass catcher (Fig. Q)

Using the grass catcher (Art. No. 65041) saves you having to rake the grass cuttings together after mowing. The grass catcher can be supplied by your dealer.

The grass catcher functions best when the lawn is dry and you push the mower at a quick walking pace.

## Warranty

The manufacturer warrants its products for exclusively non-commercial use for a period of 24 months from the date of original purchase. This warranty does not affect statutory warranty claims. The warranty covers all substantial faults of the product, which are caused by defects in material and workmanship. If a product exhibits such a defect we will, at our option, repair or replace it without cost for parts and labour provided the following requirements are fulfilled:

- The product must have been sold to the customer in a legally correct way.
- The original receipt with the customer's address, date of purchase, model and product designation is presented as proof of purchase. The product must have been purchased within the EC.

- The product was handled properly and according to the recommendations in the operating instructions. It is essential that the product has been maintained and cleaned according to the information in the operating instructions. No attempt to disassemble or repair the product has been made by either the buyer or an unauthorised third party.
- It must be ensured that only original replacement parts and original accessories approved by the manufacturer are used. There may be an increased risk of consequential damage and accidents if non-original parts or non-original accessories are used. This warranty does not cover consequential damages.
- The product must be either taken directly or sent with postage paid to an authorised service

centre. The original receipt must be sent with the product.

- The warranty does not cover damage from misuse, abuse, use of unsuitable, non-original or unauthorised interchangeable parts, replacement parts or accessories, as well as improper maintenance and cleaning.

The products contain various components that are subject to normal or use-related wear.

The warranty does not extend to these wearing parts. In particular the following components relating to this product are excluded: blade cylinder / bottom blade.

The manufacturer warranty does not affect existing warranty claims between the customer and the dealer / seller.

A

