


Niño Assembly Instructions

Components List:

1. **Main Body** with (2) installed threaded fittings
2. **Top** with integral "planter" area
3. **Internal Overflow**; 1-1/2" PVC Pipe; pipe-threaded male adapter on one end; 45° Socket Elbow on the other
4. **Drain Valve Assembly**; Brass; 3/4" Male Pipe-Thread x 3/4" Garden Hose Thread
5. **Drain Fitting**; 90° Elbow; 3/8" Male Pipe thread x 3/8" Hose barb
6. **Basket Strainer**; for 3/8" fitting
7. **Tubing**; 9/16" x 3/8"; approx. 20" long
8. **Flat Strainer**; Flat; approx. 3-3/4"x22-1/2"

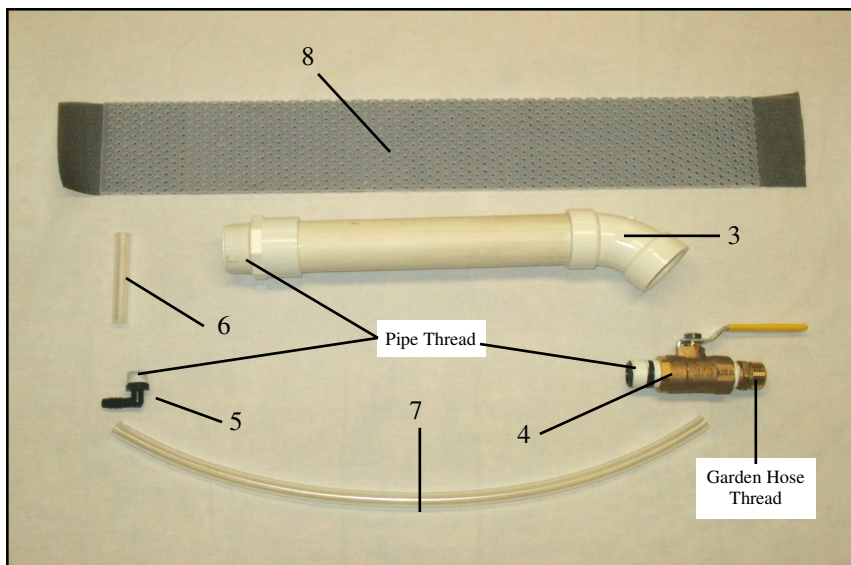

1. **Install Drain Valve Assembly.** (figure 1) Lay Main Body on its side with the 3/4" white female threaded fitting pointing towards you. From the outside, carefully thread the black male pipe-threaded end of the Drain Valve Assembly into the white female threaded fitting. DO NOT CROSS-THREAD. Hand tighten only to a snug fit with the handle in a convenient location for use. Close the valve.
2. **Install Internal Overflow.** (figure 2) Position Main Body onto its bottom. This will expose the open top and the white 1-1/2 female pipe-threaded fitting located near the bottom. From the inside, carefully thread the male pipe-threaded end of the 1-1/2" PVC Internal Overflow into the white 1-1/2 female threaded fitting. DO NOT CROSS-THREAD. Hand tighten only to a snug fit with the 45° Elbow pointing inward.
3. **Assemble Top.** (figure 3) With the Top upside down, push the basket strainer into the white welded fitting. (NOTE: If you are going to use the optional planter tray, DO NOT install the basket strainer. All other instructions remain the same.) Now, (figure 4) into the exact same fitting you used to install the basket strainer, install the 3/8" male pipe-threaded end of the Elbow Drain Fitting. Carefully snug the Elbow so that it is pointing toward the Internal Overflow. Finally, (figure 5) push the tubing over the barbed side of the Drain Fitting. After placing the remaining end of the tubing into the Internal Overflow (figure 6), set the top into place on the Main Body.
4. **Install the Flat Strainer.** (figure 7) Flat Strainer is placed into its mating area on the Top. Do not fold the screen under the perforated strainer. The extra material at each end is meant to be a convenient point to grab when you want to remove the strainer. Your Niño Rain Barrel is now ready to enjoy!

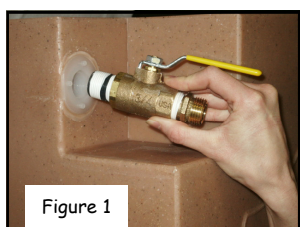


Figure 1

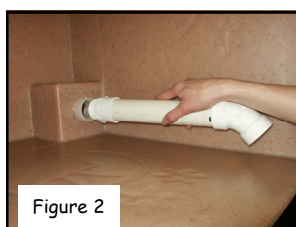


Figure 2

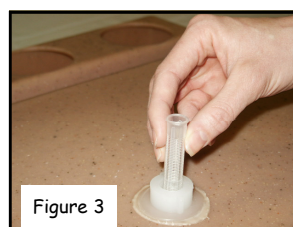


Figure 3

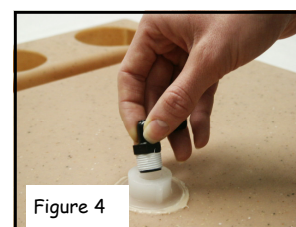


Figure 4

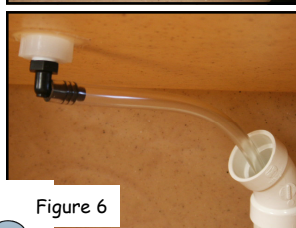


Figure 6

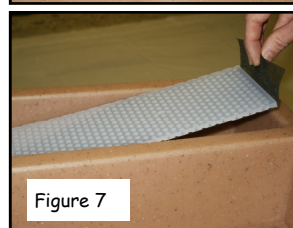


Figure 7

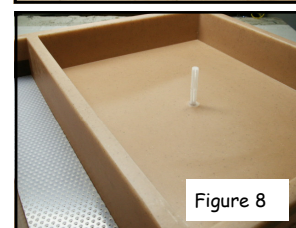


Figure 8



Proudly Manufactured by

Desert Plastics

2401A Phoenix, NE
Phone: (505) 884-3889
www.desertplastics-abq.com

Albuquerque, New Mexico
Toll-free: 1-866-793-0376

87108
Fax: (505) 884-3932
www.tijerasrainbarrels.com